



### Classic Mini Ash Tray Phone Holder Fitting

- Firstly Remove the phone holder from the steel insert by turning the locking nut

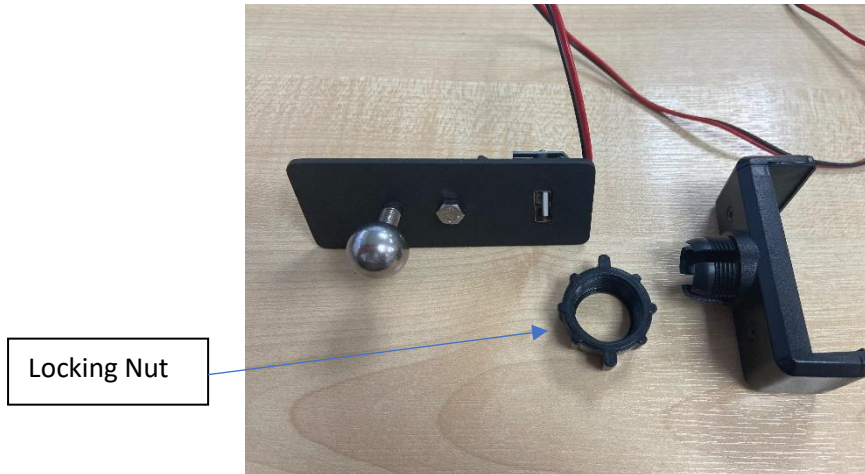

- Now remove your old Ashtray from the upper dash insert and wire in the usb charging port using the separate instructions provided
- Next offer your new metal insert in the upper dash and turn the 8mm bolt using a ratchet. You should feel the insert grip as you turn the bolt. Now tighten the bolt down. If the insert feels loose remove one of the spacers until you are happy it is a good fit (as below)

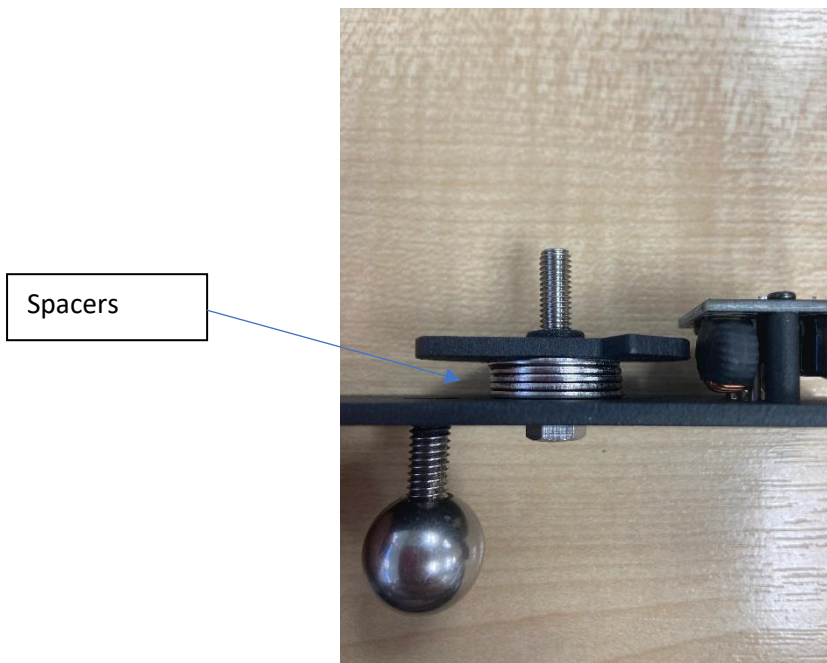

- Now that the insert is secure, replace the phone holder (remember to put on the locking nut first as below)



- Once reassembled and tightened up it should look like the below

